



Instructions for the Popcorn Machine

1. Open the machine up. There should be nothing in the hopper (the metal bowl hanging from the top).
2. Turn on light switch and heater switch.
3. Make sure the stirring bar is spinning freely in the hopper.
4. Empty contents of popcorn package into hopper (one side will be oil and the other the kernels).
5. Close lid and ensure the popcorn is spinning.
6. Popcorn will start to pop and will spill over from the hopper into holding area, listen for popping to slow down and stop.
7. If you are done popping TURN OFF HEATER/SPINNER otherwise repeat steps 4 to 6.

Cleaning the machine: (CAUTION THE HOPPER GETS EXTREMELY HOT)

1. Empty out unpopped kernels, leftover popcorn etc. (the bottom of unit comes out to make this easier)
2. Clean inside (doors, bottom etc.) with hot water
3. Wipe out hopper (can be cleaned with hot water but *cannot be submerged*)
4. Give plastic doors etc a rinse with vinegar to remove greasy residue

